 
 


 
 
CARTRIDGE VALVES

Check Valves, Pilot Operated Checks, Shuttle Valves

 
 
CVFP

	Check Valve - Forward Poppet		
	Part Number	Flow L/min	Cavity
	CVFB-04-N-0-020	10	0420
	CVFP-08-N-0-005	38	0820
	CVFP-10-N-0-005	68	1020
	CVFP-12-N-0-005	136	1220
	CVFP-16-N-0-005	228	1620

 
CVRP

	Check Valve - Reverse Poppet		
	Part Number	Flow L/min	Cavity
	CVRP-08-N-0-005	38	0820
	CVRP-10-N-0-005	68	1020
	CVRP-12-N-0-005	136	1220
	CVRP-16-N-0-005	190	1620

 
 
 
POCX

	Pilot Operated Check Valve 3:1 Ext. Pilot		
	Part Number	Flow L/min	Cavity
	POCX-08-N-0-4T-030	38	0820
	POCX-10-N-0-4T-030	70	1020
	POCX-12-N-0-4T-030	132	1220

 
 
POCI

	Pilot Operated Check Valve 3:1 Internal Pilot		
	Part Number	Flow L/min	Cavity
	POCI-08-N-F-0-10	38	0825
	POCI-10-N-F-0-10	70	1025
	POCI-12-N-F-0-10	136	1225

 
 
POCV

	Pilot Operated Check Valve 3:1 Vented		
	Part Number	Flow L/min	Cavity
	POCV-10-N-F-0-10	60	1040
	POCV-12-N-F-0-10	132	1240
			

 
 
HOSV

	Hot Oil Shuttle - Springless		
	Part Number	Flow L/min	Cavity
	Closed Centre		
	HOSV-10-N-C-0	60	1040
	Open Centre		
	HOSV-10-N-O-0	60	1040
			
	Closed Centre + Relief		
	HOSR-10-N-6T-0-150	22	1020

BDSV

	Shuttle Valves			
	Part Number	Sig	Flow L/min	Cavity
	BDSV-04-N-3-0-00	Int	6	0430
	BDSV-08-N-3-0-00		12	0830
	BDSV-10-N-3-0-00		23	1030
	BDSV-10-N-2-0-2B*	Ext	23	1020
	* = Ext. signal			

SDSV

	Brake Shuttle Valve		
	Part Number	Flow L/min	Cavity
	SDSV-08-N-4C-0-100		
		20	0840

Use the cavity size to select the correct body type then choose the desired port size.