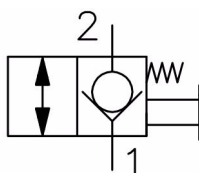 
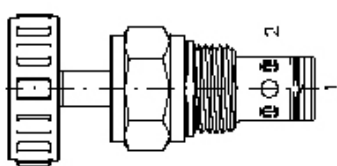 
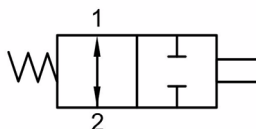 
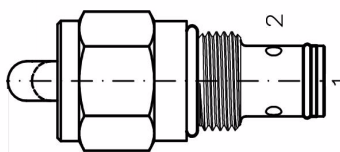 


MANUAL DIRECTIONAL CONTROL VALVES

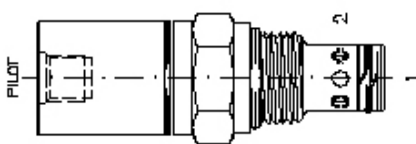 


Manual Pull to Open		
Part Number	Flow L/min	Cavity
MRPV-10-N-K-0	70	1020



Manual Push to Close		
Part Number	Flow L/min	Cavity
MPTC-10-N-0	22	1020

 
 
 
AIR/OIL PILOT DIRECTIONAL SPOOL VALVES

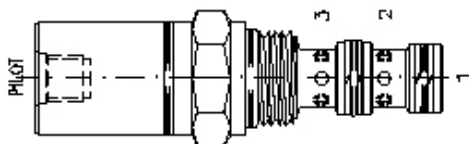 


PILOT OPERATING PRESSURE RANGE:

FOR AIR = 3.4-17.2 bar

FOR OIL = 3.4-207 bar

 
 
 
 
Circuit	Air/Oil Pilot Directional Spool Valve		
	Part Number	Flow L/min	Cavity
	AODV-10-N-C1-0-4T	30	1020
	AODV-12-N-C1-0-4T	60	1220
	AODV-10-N-O1-0-4T	30	1020
	AODV-12-N-O1-0-4T	60	1220
	AODV-10-N-C3-0-4T	22	1020
	AODV-12-N-C3-0-4T	60	1220



PILOT OPERATING PRESSURE RANGE:

FOR AIR = 3.4-17.2 bar

FOR OIL = 3.4-207 bar

Circuit	Air/Oil Pilot Directional Spool Valve			
	Part Number	Flow L/min	Cross Over	Cavity
	AODV-10-N-3A-0-4T	30	Closed	1030
	AODV-12-N-3A-0-4T	60		1230
	AODV-10-N-3B-0-4T	30	Closed	1030
	AODV-12-N-3B-0-4T	68		1230
	AODV-10-N-3C-0-4T	30	Open	1030
	AODV-12-N-3C-0-4T	60		1230
	AODV-10-N-3D-0-4T	30	Open	1030
	AODV-12-N-3D-0-4T	60		1230

Use the cavity size to select the correct body type then choose the desired port size.